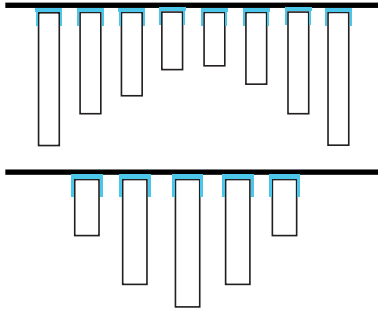
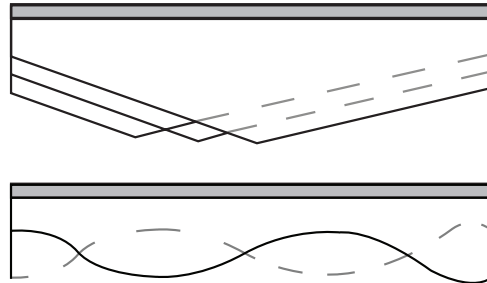


**Installation**

- First fasten the c-channel trims\* directly to the wall or ceiling substrates
- Run a continuous bead of acouSTIC adhesive within the c-channel before slip-fitting SONEX linear baffle absorber into the c-channel
- Before butting baffles tight in continuous rows, apply short beads of acouSTIC adhesive to baffle ends; then spread using a 1-inch putty knife

**Ceiling Sections****Ceiling Elevations****T-shaped Profiles**