



WHISPERWAVE Ribbon Wall Panel

Direct-Apply Installations Using acouSTIC Adhesive



Substrates must be clean, dust- and oil-free. Prep surfaces to ensure the best bond. Cut the tube end to produce a 1/4"-diameter bead of adhesive.

Apply beads of adhesive as shown. Gently slide the panel into position side to side and up and down. Press onto the substrate. Hold the panel in position for 5 seconds. If necessary, remove panels from the surface for about one minute to allow the adhesive to become tacky with exposure to the air. Then press the panel back into position.

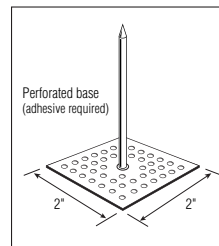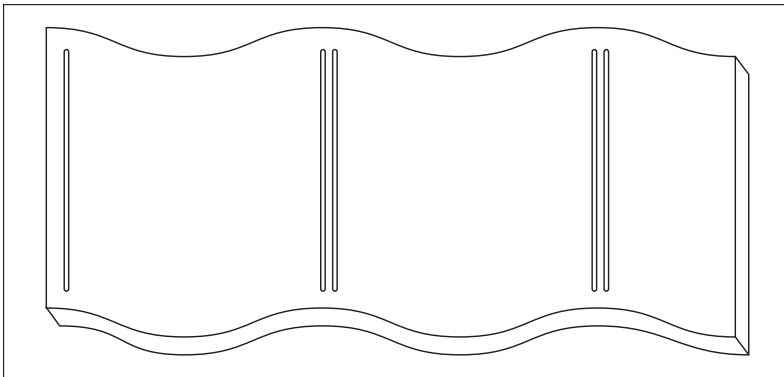

Stick pins, optional

When creating continuous panel rows, use white hot-melt glue between ends to ensure the seams remain tight.



Hot-melt glue accessories not provided